




AMERICAN SPECIALTIES, INC.
 441 Saw Mill River Road Yonkers, NY 10701-4913
 www.americanspecialties.com 914-476-9000

FOR MODEL NO 0360

Installation Template

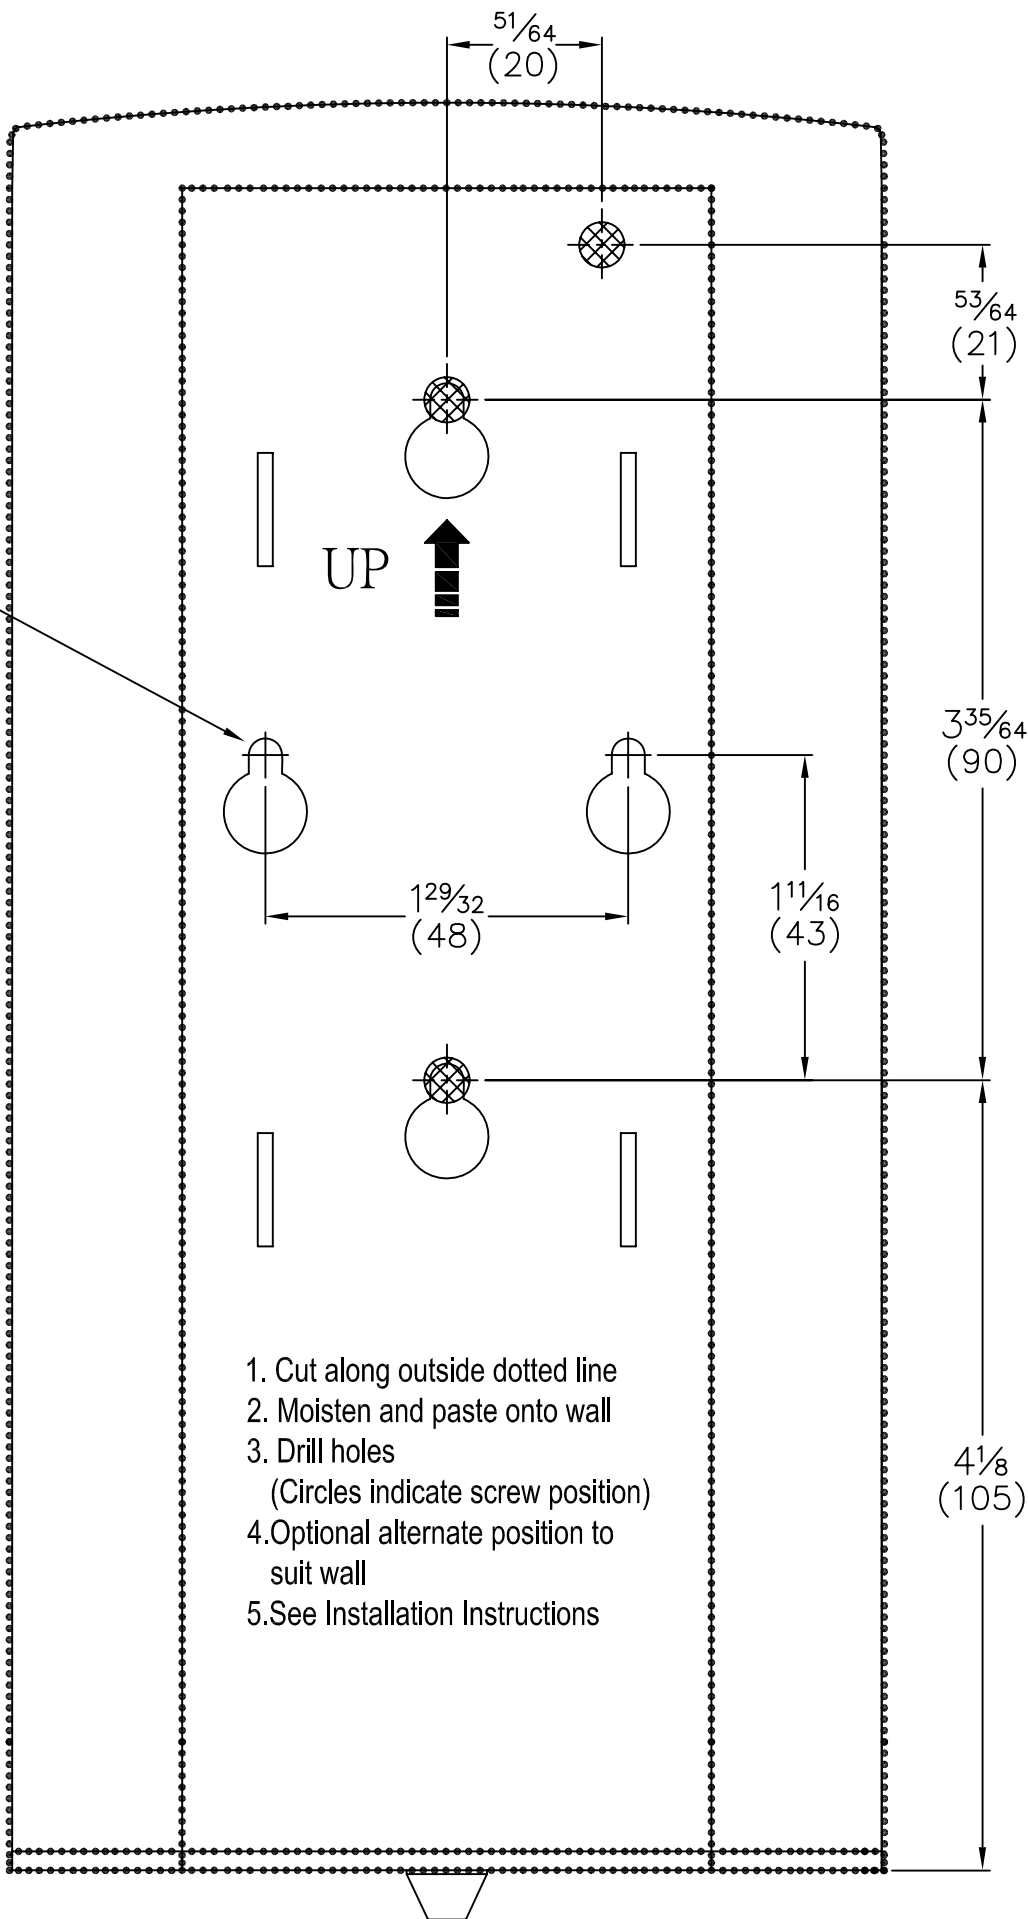

1. Cut along outside dotted line
2. Moisten and paste onto wall
3. Drill holes
(Circles indicate screw position)
4. Optional alternate position to suit wall
5. See Installation Instructions

05093040

P06-0237