


Toilet Tissue Holder With Lock (Double) Recessed

Toilet Tissue Dispensers

Simplicity

MasterFormat Section 10 28 13

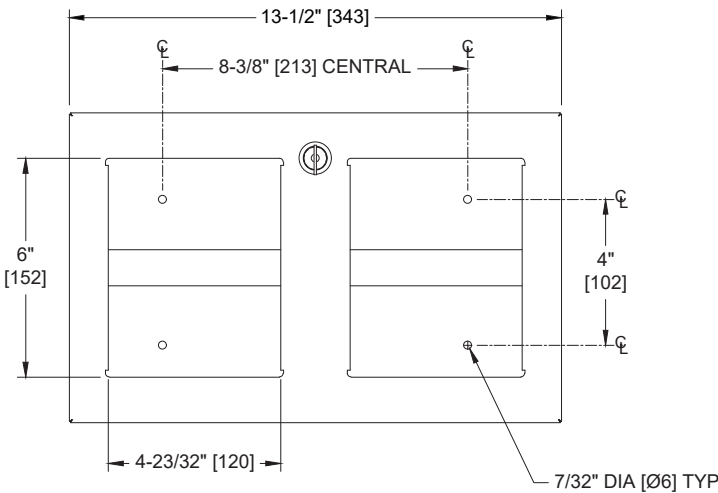

Scan for
Information



SUSTAINABILITY/LEED

MR 4.1 (1) MR 6 (1) EQ 4.2 (1)
MR 4.2 (1) EQ 4.1 (1) EQ 4.4 (1)

NOTE:

ALL DIM'S INCH [MM]
ILLUSTRATION FOR REF ONLY AND NTS

PRODUCT OVERVIEW

Satin finish. Locked, recessed Double Toilet Tissue Holder holds and dispenses all standard core roll tissue up to 6" diameter. [Ø152] roll (holds two (2) rolls). Fabricated of stainless steel type 304 alloy 18-8. Theft-resistant spindle is stainless steel.

KEY FEATURES & SPECIFICATIONS

- Double Roll
- Type 304 Stainless Steel
- Recessed
- Held closed with tumbler lock

OPERATION & MAINTENANCE

Theft-resistant spindle revolves freely and hold rolls until cores are removed. Empty rollers cannot be removed without key unlocking door.

TECHNICAL INFORMATION / PRODUCT PROPERTIES

Property	Value
Dimensions	13-1/2" [343] W x 8-1/2" [216] H x 4-5/8" [117] D
Construction	Type 304 Stainless Steel - Satin Finish
Mounting	Recessed
Capacity	Holds two (2) rolls standard or 1800 sheet 4-1/2" [114] x 5-1/4" Dia. [Ø133] toilet paper.

INSTALLATION

For Standard Dry Wall Recessed Mounting: Use two (2) #10 stainless steel Philips flat or oval head self-threading or wood screws (by others) of suitable length to penetrate blocking in back of RWO by approximately 1/2" [13]. Apply a continuous bead of silicone sealant (by others) behind flange. Tighten screws to hold flange tight against finished wall face. Wipe off excess sealant immediately.

Rough Wall Opening (RWO) required is 12-5/32" [309] W x 7-5/32" [182] H x 4-1/32" [102] D

OPTIONS

Installation Options:

For Wet wall Recessed Mounting: Slop grout into Rough Wall Opening. Apply grout to back of unit and on perforated lugs and push unit into opening to seat flange flush with wall face. Allow unit to set and grout to cure before use. Apply a continuous bead of silicone sealant (by others) behind flange. Insert into RWO and adjust clamp so that it grips inside wall surface through opening.

For compliance with 2010 ADA Accessibility Standards Install unit with centerline of roller 19" [483] min AFF to 42" [1067] max AFF and 7" [178] min to 9" [229] max from front of commode to centerline of dispenser.

WARRANTY

One (1) Year from date of Invoice